


ADJUSTABLE LENGTH COLUMN Installation

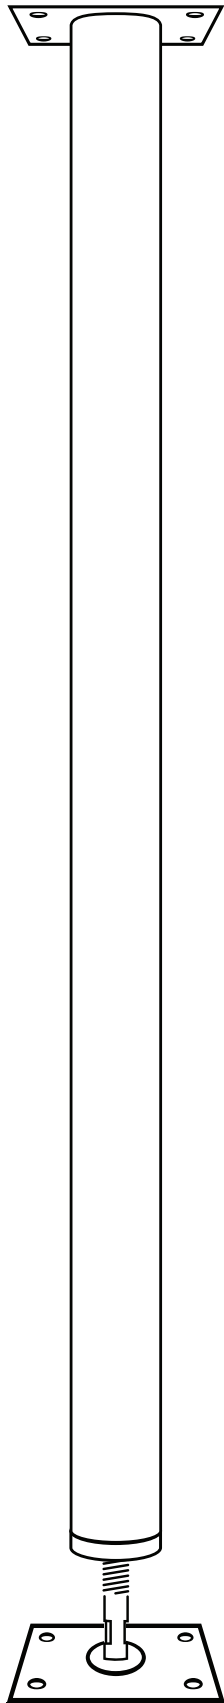

1

Choose appropriate size and strength based on construction project.

2

Place column vertically between footer and beam with adjustable end down.

3

Level and plumb. Use adjustable wrench to lengthen until tight. Additional tightening can be made during construction to ensure floor stays level.

4

Pour cement floor to permanently lock adjustment. Or hammer thread to ensure it will not move.