


ADJUSTABLE JACK POST Installation

TIME: 5–10 minutes

TOOLS: adjustable wrench

For metal beam, place post as shown. For wood structures, flip jack post so that screw is at the bottom.


MODEL	TESTED TO AT MIN EXT	TESTED TO AT MAX EXT
1C	9,100 LBS.	15,500 LBS.
MA	18,800 LBS.	26,400 LBS.
79G	11,350 LBS.	14,200 LBS.
2T	9,100 LBS.	17,150 LBS.
3T	15,750 LBS.	17,900 LBS.
4T	18,000 LBS.	18,000 LBS.

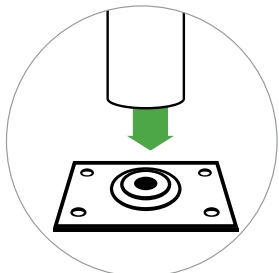

1

Place flat side of plate on solid footing. Place large diameter post on plate.


For Model 4T, skip steps 2 and 4.

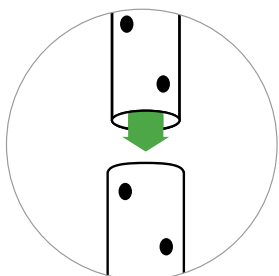

2


Insert small diameter post inside large post.

For maximum height, insert with holes at bottom. Reverse for shorter applications.

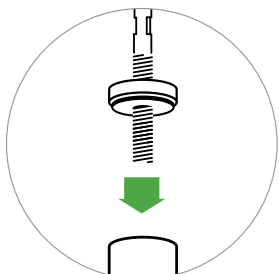


3

Place adjustment nut and screw on top of small diameter post.

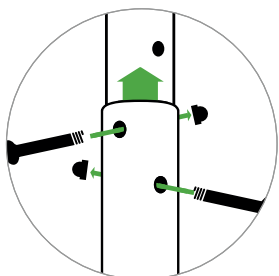

4

Lift small diameter post to highest position. Align holes and place carriage bolts through outer and inner posts. Install the acorn nut and tighten.

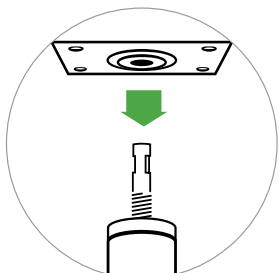


5

Place remaining plate on top of flat screw with flat side toward beam.

Level and plumb both sections of jack before and during lifting to ensure it is perpendicular.

Use adjustable wrench to complete assembly.

A sagging floor should be lifted gradually, one-half turn per week.

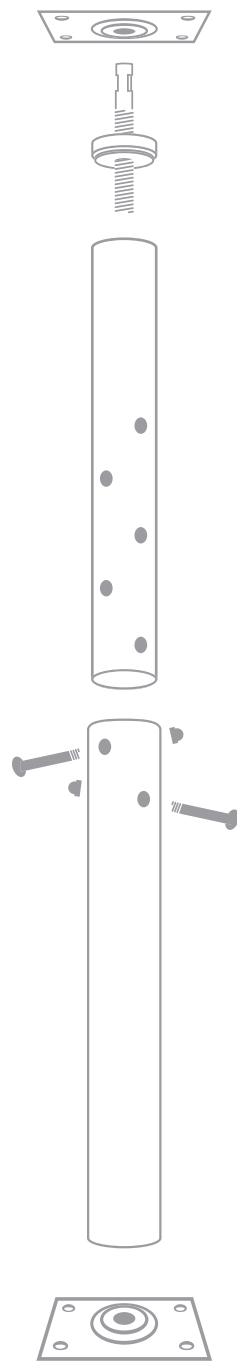

ADJUSTABLE JACK POST In the Box

MODEL

4T

ADJUSTMENT SCREW: (1) JS17125FTH
COLLAR: (1) JC25

END PLATE: (2) JP1344 4" x 4"



TUBE: (1) 4TA259P 9" length, 2.5" outside diameter, 15 gauge



MODEL

3T

ADJUSTMENT SCREW: (1) JS17125FTH
COLLAR: (1) JC225

END PLATE: (2) JP1344 4" x 4"



CARRIAGE BOLT WITH ACORN NUT: (2) JP625325



INNER TUBE: (1) 3T225175PP 17.5" length, 2.25" outside diameter, 15 gauge



OUTER TUBE: (1) 3T2517PP 17" length, 2.5" outside diameter, 15 gauge



MODEL

2T

ADJUSTMENT SCREW: (1) JS17125FTH
COLLAR: (1) JC225

END PLATE: (2) JP1344 4" x 4"



CARRIAGE BOLT WITH ACORN NUT: (2) JP625325



INNER TUBE: (1) 2T22528PP 28" length, 2.25" outside diameter, 15 gauge



OUTER TUBE: (1) 2T2530PP 30" length, 2.5" outside diameter, 15 gauge



MODEL

79G

ADJUSTMENT SCREW: (1) JS17125FTH
COLLAR: (1) JC225

END PLATE: (2) JP1344 4" x 4"



CARRIAGE BOLT WITH ACORN NUT: (2) JP625325



INNER TUBE: (1) 79G22544PP 44" length, 2.25" outside diameter, 15 gauge



OUTER TUBE: (1) 79G2547PP 47" length, 2.5" outside diameter, 15 gauge



MODEL

MA

ADJUSTMENT SCREW: (1) JS17125FTH
COLLAR: (1) JC25

END PLATE: (2) CPMA 5" x 4.125"



CARRIAGE BOLT WITH ACORN NUT: (2) JP625325



INNER TUBE: (1) MA2546PP 46" length, 2.5" outside diameter, 12 gauge



OUTER TUBE: (1) MA27547PP 47" length, 2.75" outside diameter, 12 gauge



MODEL

1C

ADJUSTMENT SCREW: (1) JS17125FTH
COLLAR: (1) JC225

END PLATE: (2) JP1344 4" x 4"



CARRIAGE BOLT WITH ACORN NUT: (2) JP625325



INNER TUBE: (1) 1C22547PP 47" length, 2.25" outside diameter, 14 gauge



OUTER TUBE: (1) 1C2551PP 51" length, 2.5" outside diameter, 14 gauge

